


Instruction Manual of RMC-611CL

Assume RMC-611CL is remote **A** and the original remote you want to copy is remote **B**.

When you copy, put remote **B** near the position of the battery of remote **A**. RMC-611CL is only for Fixed code duplication.

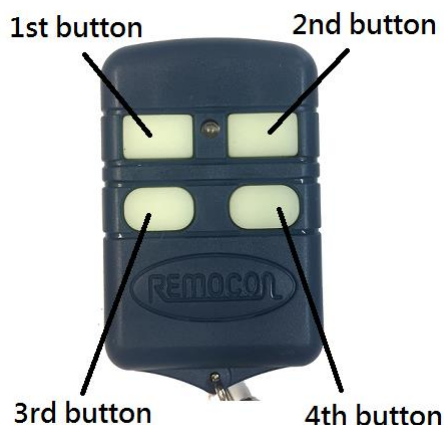

Step 1.

Keep pressing the 2nd & 3rd buttons of remote **A** simultaneously for around 2 sec.; the LED light will flash slowly and you can release the buttons now.

Step 2.

After the 2 times of slow flashes, the LED light will start to flash every 0.5 sec. to enter the duplicating mode. Press the first button of remote **B** within 12 sec.. When the LED of remote **A** starts to flash quickly, press the button of remote **A** that you would like to store within 7 sec.(REMARK) ; the LED light will pause for a sec. and then keep flashing every 0.5 sec.(ready to read next button).

Step 3.

Within 12 sec., repeat Step 2. to copy next button until you finish the duplication of all buttons of remote **B**.

Step 4.

Wait 12 sec. until the LED light of remote **A** stop flashing(or reload the battery to exit the duplicating mode) to exit the duplication procedure. And the remote **A** is ready to transmit now.

REMARK:

If you would like to store the code to channel 5~8 of RMC-611CL, please refer to below(how to transmit is the same):

Channel 5: by pressing button 3rd & button 4th simultaneously

Channel 6: by pressing button 1st & button 2nd simultaneously

Channel 7: by pressing button 1st & button 3rd simultaneously

Channel 8: by pressing button 1st & button 4th simultaneously